T3 TROFFER ASSEMBLY
INSTALLATION INSTRUCTIONS

Model(s): **T3C-14-MV-35** **T3C-22-MV-35** **T3C-24-MV-35**
T3C-14-MV-40 **T3C-22-MV-40** **T3C-24-MV-40**
T3C-14-MV-50 **T3C-22-MV-50** **T3C-24-MV-50**

The installation must only be performed by a licensed electrician.

To prevent death, injury or damage to property, this product must be installed in accordance to National Electrical Code (NFPA70) in the US or Canadian Electrical Code (CSA 22.1) in Canada.

Disconnect power before installing the product or servicing it.

Wait until fixture has cooled down before installing or servicing the fixture.

MIN. 90°C SUPPLY CONDUCTORS

1. Carefully unpack the fixture from its packaging. Inspect product for defects due to shipping.
2. Locate desired positioning for the fixture in ceiling grid.
3. Turn off power to appropriate circuit at the breaker box.
4. Place the fixture into the T-bar ceiling panel. Secure to grid per state and local codes.
5. Remove cover from Power Supply/Junction Box by removing two screws.
6. Connect wiring as shown. Grey and Purple wiring are for 0 - 10V dimming systems. Cap off if not used.
7. Reattach cover of Junction Box and secure with two screws.
8. Turn power on and verify that the panel is lit.

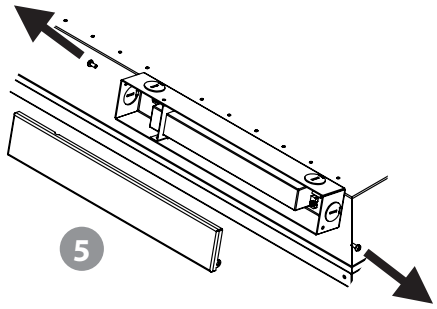

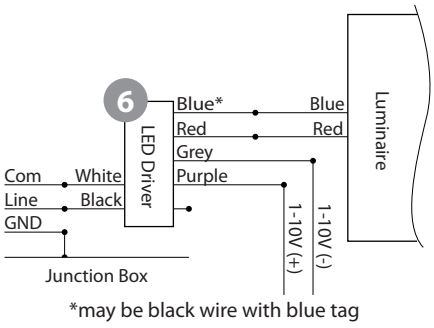

*may be black wire with blue tag